




STEP #2
REMOVE SIDE BOLTS ON THE
CONNECTION END

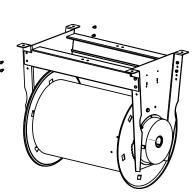


STEP #3
REMOVE THE FRAME ON THE **CONNECTION END**

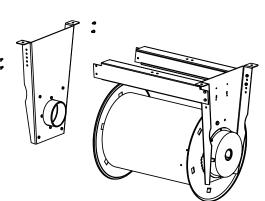



STEP #4
REMOVE THE DRUM END ON THE
CONNECTION END

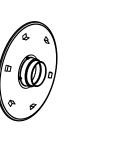

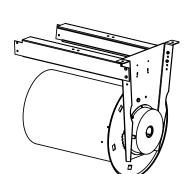


STEP #5 REMOVE THE REDUCER HOLDING NUTS

 


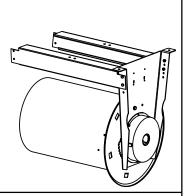


STEP #6
REMOVE THE REDUCER

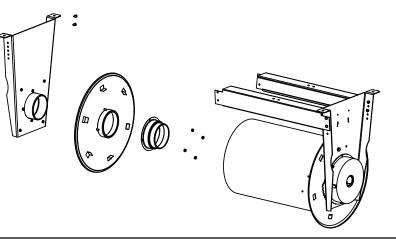


STEP #7
CHANGE THE REDUCER

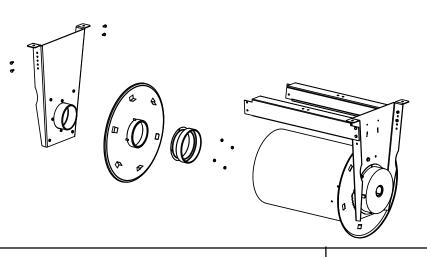


STEP #7
MOUNT BACK THE REDUCER

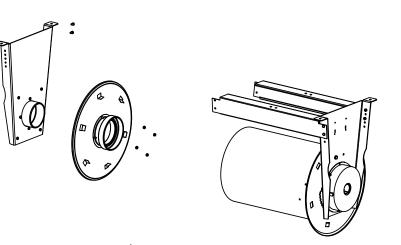


STEP #8 FIX THE REDUCER WITH THE NUTS

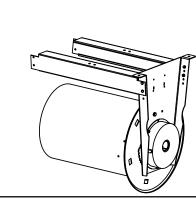


STEP #9
MOUNT BACK THE DRUM END
TO THE DRUM

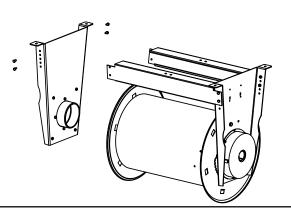

STEP #10 MOUNT BACK THE FRAME TO THE HOSE REEL

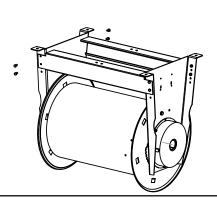

STEP #11
FIX BACK THE FRAME TO THE HOSE REEL
WITH THE SIDE BOLTS

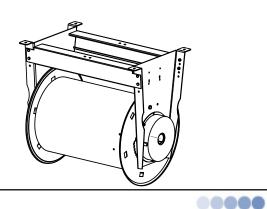

00000

IDENTIFICATION / TAGGING:

CUSTOMER: CUSTOMER P.O.: PROJECT: ENGINEER: SALES REP.

> www.lev-co.com • 1.888.862.5356

The device depicted and described hereon embodies proprietary information owned by the manufacturer. All design, manufacturing, reproduction, sales and patent rights regarding this device or drawing reserved except where explicit right is guaranteed in writing. We reserve the right to make design changes.

Janos 11/24/2016 N/A

How to change from 6.4" to 8" reducer SPRING RECOIL OR ELECTRIC HOSE REEL

STEP BY STEP INSTRUCTIONS

Sheet: 1/1





File Name: HOW TO CHANGE REDUCER